

11. BAM P&P ECU Spare inputs / outputs

Some of the unused inputs / outputs of EMU BLACK are available on the additional connector.

ECU Terminal	Function
1	+12V from main relay
2	Power ground
3	CAN H
4	CAN L
5	RS232.TXD
6	RS232.RXD
7	Flex Fuel input
8	+5v ref.
	+5v ref.
10	Analogue ground
11	EGT 2 input
12	Analogue ground
13	EGT 1 input
14	Battery +12v
15	Analogue #5 input
16	Analogue ground
17	Analogue #6 input
18	Analogue ground
19	Cam #2 in
20	+5v ref.
21	+5v ref.
22	+5v ref.
23	Analogue ground
24	Analogue ground
25	Analogue ground
26	MAP sensor input